


## USB Interface card

### USB Interface Print for AMI transmitters.

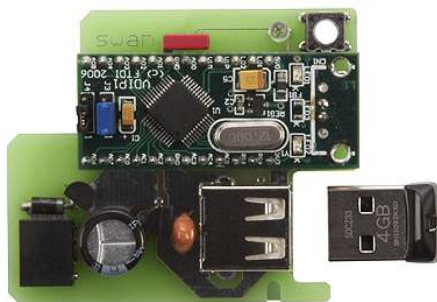

« plug-and-play » Installation in the communication slot for AMI transmitters (see limitations).

#### Main features:

- Extended logger storage capabilities, depending only on USB memory limitation.
- Menu driven firmware upload (see instructions)

#### Ordering details:

**A-81.420.040 OPTION AMI USB INTERFACE**

Listprice: 240Euro / 325USD

Contains USB Interface board, 4GB USB memory stick, instruction manual

#### Word of advice:

The USB memory stick can be removed while the AMI transmitter is powered. However, make sure the complete interface card is not unplugged while removing the memory card (see instructions on page 5)!

You can use any type USB memory stick, but you might not be able to close the AMI transmitter properly.

#### Limitations:

- AMI firmware must be **V5.0** or higher.
- AMI transmitters with lower firmware must be updated with RS232 interface and HyperTerminal to the actual firmware.
- It can only be used with AMI transmitters, not available for AMU, FAM/PAM, Copra and older.
- AMI transmitter support only one interface option as always.