

Immersion assembly for oxygen measurement in open basins and tanks

## Immersion assembly Oxydip


The immersion assembly is used for the Swansensor OXYSAFE.

Because the sensor is installed in an angular position, air accumulations at the measuring membrane are avoided.

The cable is led through threaded joints.

### Technical data:

Material:	PVC
Total length (with sensor):	705 mm
Operating pressure:	pressure-free against atmosphere
Protection:	IP68 (at 20 °C)
Ambient temperature:	-10 ... +50 °C

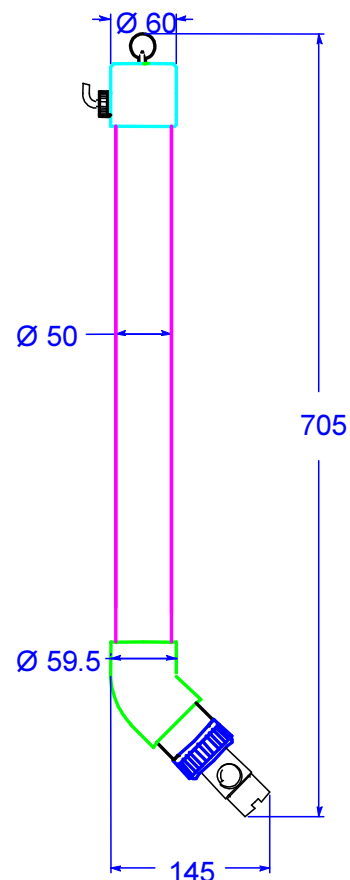

<b>Order number</b>	<b>Oxydip</b>	<b>A-83.111.010</b>
---------------------	---------------	---------------------

### Accessories:

A-89.300.110 Plastic chain (red-white), 4 m, to mount the Oxydip